

## FOOTSWITCH OPERATION

## LED STATUS

## GETTING STARTED

## 4 RECORD

Press footswitch once



## 5 PLAY

Press footswitch once



## 6 OVERDUB

While loop is playing, Press footswitch once



## 7 UNDO/REDO

While loop is playing, Press and hold footswitch



## 8 STOP

Press footswitch twice



## 9 CLEAR

While loop is stopped, press and hold footswitch



## 1

## LOWER MIXER CHANNEL LEVELS

Lower the gain/trim and fader controls on the mixer channel to which you will be connecting the JamMan Vocal XT.

## 2

## MAKE CONNECTIONS

Make connections (see connection diagram on other side).

## 3

## SET LEVELS

Set the **LOOP LEVEL** knob to the twelve o'clock position (unity gain).

Sing into the mic and adjust the **Mic Level** control, which lights to show signal level, optimal level, and clipping. During vocal peaks, the **Mic Level** LED should light amber, but not red.

Set mixer channel and master faders at minimum. Sing and adjust mixer gain/trim to just below clipping. Set channel fader to 0dB and then bring up master faders to desired listening level.

# CONNECTION DIAGRAM

