

TONE:
Controls tone, right for brighter sounds

LEVEL:
Controls output level of pedal. Turn up above unity for an added boost effect

DRIVE:
Controls Drive or Gain of Overdrive.

MODE SWITCH:
Selects FLAT for Normal EQ, or PHAT for slight bass boost



EFFECT TYPE: Overdrive
Power Requirement: 9V Battery or 9VDC Center Negative Power Supply Required
Input/Output: Mono Instrument In, Mono Instrument Out