

**MOOER**

# A7 AMBIANCE

Reverb Pedal

## PRECAUTIONS

### PLEASE READ CAREFULLY BEFORE PROCEEDING

#### Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Be sure to only use an AC adapter which supplies 9V DC 200mA. Unplug the AC power adapter when not in use or during electrical storms.

#### Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight or other heat sources
- Magnetic fields
- Excessively dusty or dirty locations
- Strong vibrations or shocks
- High humidity or moisture

#### Radio Frequency Interference

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.



#### Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

## Features

- 7 different reverb effects from classic to psychedelic.
- Choose between INFINITE trail function or the more traditional "Trail On" function.
- Buffer bypass.
- Storable preset for each effect.
- Firmware updatable via USB.

## Layout

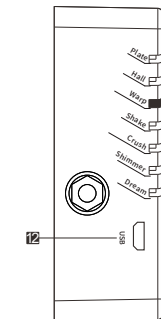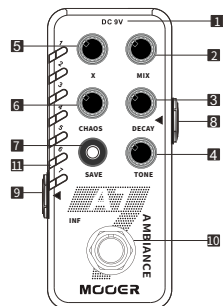

#### 1. DC 9V

- Connect to 9V power supply.

#### 2. MIX

- Dry/wet signal mix control

#### 3. DECAY

- The decay control of reverb

#### 4. TONE

- Tone control of reverb

#### 5. X

- the size of the virtual room control

#### 6. CHAOS

- Special effects control

#### 7. SAVE

- Saving preset

#### 8. INPUT

- 1/4" mono jack

#### 9. OUTPUT

- 1/4" mono jack

#### 10. Footswitch

- Switch on/off the pedal.

#### 11. LED indicators

- Showing current effect type

#### 12. USB port

- Firmware update

## Instructions

#### 1. Switch effect type

Power on the A7. Press the SAVE button to switch between 7 types of reverb effects.

#### 2. Parameter editing

Rotate control knobs to change the parameters of effects directly. LED indicators will blink after any change is made. Press and hold SAVE button to save the change.

#### 3. Infinite Trail

Press and hold the footswitch during play to activate INFINITE function. The trail will continue until manually switched off.

#### 4. Trail on

Power off pedal. Press and hold the footswitch while powering on the pedal again to switch between Trail On/Off. SAVE button will turn red when Trail is on, blue means Trail is off. Trail On allows the effect to fade out naturally when it is switched off during play.

#### 5. Factory Reset

Power off the pedal. Press and hold SAVE button then power on the pedal. The LED indicator will start to blink. Release the SAVE button to finish factory reset.

Reverb Type	Description
<b>PLATE</b>	Based on a traditional mechanical plate reverb
<b>HALL</b>	Large spacious reverb with a long decay. Can be changed to ROOM/CHURCH reverb by rotating the X control.
<b>WARP</b>	Modulated reverb
<b>SHAKE</b>	Shaking modulated reverb
<b>CRUSH</b>	Reverb with LOFI effect
<b>SHIMMER</b>	Reverb with octave effect
<b>DREAM</b>	Reverb with slow attack effect and modulation effect

## Specifications

**Input:** 1/4" mono jack (impedance 2.2M Ohms)

**Output:** 1/4" mono jack (impedance 100 Ohms)

**Power supply:** 9V DC transformer (internal negative external), MOOER Micro Power is recommended

**Current Draw:** 200mA

**Dimensions:** 93.5mm(D) x 42mm(W) x 52mm(H)

**Weight:** 155g

**Accessories:** User Manual\*

\*Disclaimer: Parameters may update without notice.