

# MOOER


## C4 AirSwitch Wireless Footswitch Controller for SD30 and SD75

### Quick Start Manual

The Mooer C4 AirSwitch is a wireless footswitch controller that can be used to remotely control functions of the MOOER SD30 and SD75 Combo Amplifiers.

When the wireless footswitch is connected to SD30/SD75, its 4 footswitches **A**, **B**, **C**, and **D**, directly mirror the functions of the **PRESET** buttons.

Please see the manual of your amplifier for more detailed information about the functions.

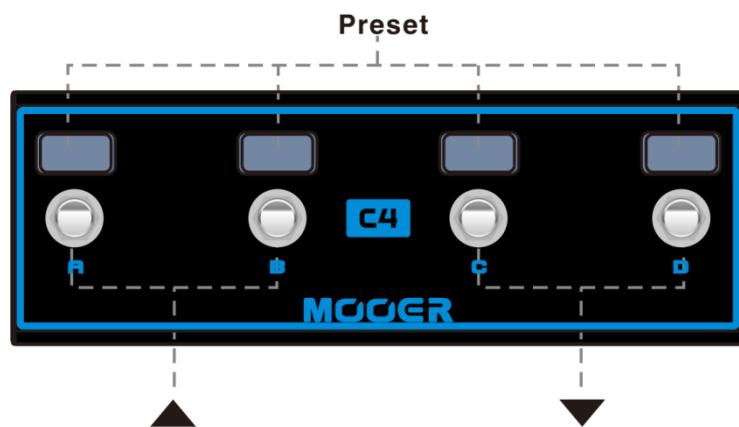

- Press footswitches **A** + **B** simultaneously for **BANK ▲**
- Press footswitches **C** + **D** simultaneously for **BANK ▼**
- Press footswitch **A**, **B**, **C**, or **D** to select a corresponding preset

#### Pairing the wireless footswitch with your amplifier:

- Make sure the SD amplifier is turned off.
- Press and hold footswitches **C** + **D** on the wireless controller.
- Power on the amplifier
- Release the footswitches when the amplifier has finished booting up
- Set **WL-FS** to **ON** in the **SYSTEM SETTINGS**