

**MOOER**

**F4**  
**Wireless Footswitch**

**Owner's manual**

# Content

<b>Precautions</b>	01
<b>Layout</b>	02
Instructions	03-04
<b>Specifications</b>	05

# Precautions

## PLEASE READ CAREFULLY BEFORE PROCEEDING

### Power Supply

- Please use a power supply that meets UL, CSA, VED, or CCC standards
- Please use the power supply that meets manufacturer's power requirement
- Please unplug the power supply when the device is turned off or a during thunderstorm
- Please do not expose the device which has battery power to heat or let it overheat
- If battery leakage occurs, please do not touch the liquid with your skin or eye. If you do come in contact, please see a doctor
- The battery included with the device may cause fire or chemical burns if handled improperly

### Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

• Direct sunlight	• Extreme temperature or humidity
• Excessive dusty or dirty location	• Magnetic fields
• High humidity or moisture	• Strong vibrations or shocks

### Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint.


### FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

# Layout

MOOER F4 is a wireless footswitch control platform designed for controlling the MOOER intelligent products and extend more possibilities.

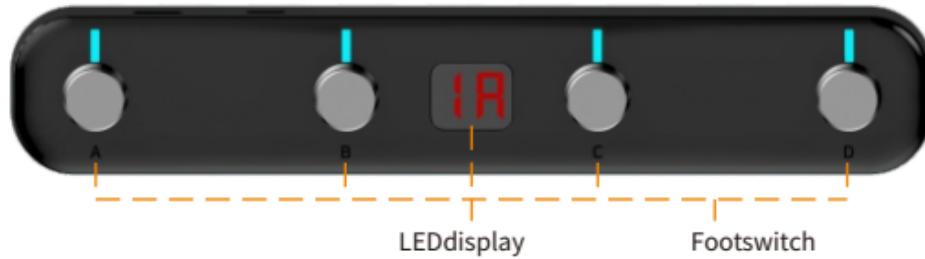

# Instructions

- **On/Off**

Toggle on/off the footswitch

- **Pairing**

Please pair the F4 with your device before the first time of using. After pairing is complete, the F4 will connect to last device you use automatically when you turn it on. If you switch to another wireless footswitch, please re-pair it with your device again.



- 1) Turn on the F4.
- 2) Press and hold A and C footswitches simultaneously.
- 3) Select the wireless footswitch icon  in the App of your device to confirm pairing.
- 4) The  icon will be lightened if the F4 pairs with your device successfully. Then you can start to use the F4.

- **More Options**

For more detailed information about the footswitch control, you can refer to the guide in the App. You can access the guide by select the  icon in the footswitch page of the App.

- **Battery and Charging**

The battery life of the lithium battery in F4 is shown by the color of the LOGO LED. GREEN for no need for charging; RED for low power status, need to be charged as soon as possible.

# Specifications

**Dimensions:** 224mm(D)\*40mm(W)\*38mm(H)  
**Weight:** 220g  
**Battery:** 720mAh  
**Charging requirements:** USB-A to USB-C cable. 5V1A  
**Charging time:** 3 hours  
**Battery life:** 11 hours  
**Wireless:** 2.4G

**MOOER**  
[www.mooeraudio.com](http://www.mooeraudio.com)



2030501854

SHENZHEN MOOER AUDIO CO. LTD  
6F, Unit D, Jinghang Building, Liuxian 3rd Road,  
Bao'an 71 District, Shenzhen, China. 518133  
Made in China