

Minimal Series MIDI Input Selector



Thank you for choosing the One Control Minimal Series MIDI Input Selector.

This compact yet powerful device allows you to seamlessly switch between two instruments such as guitars, stereo synthesizers, or other line-level gear using either a foot switch or MIDI control.

Because of its passive true-bypass design, it can also function as a stereo A/B box when connected in reverse.

Features

Switch between two input sources via foot switch or MIDI

Stereo or mono compatible with full stereo input and output

Can be used as an AB box when connected in reverse

Two foot switch operation modes: Standard and Flash

MIDI PC and CC control with selectable MIDI channel via DIP switch

Compact and lightweight design for easy integration into pedalboards

Front Panel and Connections

Inputs A and B: Connect your instruments or signal sources

Outputs A and B: Connect to your amplifier, audio interface, or other gear (can be reversed for AB box use)

Foot Switch: Switches between input sources

LED Indicator: Red for Standard mode, White for Flash mode

MIDI In: Accepts MIDI signals for remote switching

Operation

Foot Switch Modes

Standard Mode (LED Red):

Press the foot switch once to toggle between Input A and Input B

Flash Mode (LED White):

Input switches only while the foot switch is held down. Releasing the foot switch returns to the original input

Switching Between Foot Switch Modes

From Standard to Flash Mode:

Power on the unit and select an input while not pressing the foot switch in Flash mode

Turn off the power by removing the adapter

Reconnect the adapter while holding the foot switch until the LED turns white

From Flash to Standard Mode:

Turn off the power by removing the adapter

Reconnect the adapter while holding the foot switch until the LED turns red

MIDI Control

MIDI Channel Selection:

Use the DIP switch on the side to select the desired channel. When power is connected, the LED flashes the number of the currently set channel

MIDI Program Change (PC):

PC number 0 selects Input A, PC number 1 selects Input B

MIDI Control Change (CC):

CC number 102 with values 0 to 63 selects Input A. Values 64 to 127 select Input B

Note

MIDI PC and CC numbers range from 0 to 127. Some devices label PC numbers as 1 to 128. In that case, increase the PC number by one

Technical Specifications

Current Consumption: 60 mA

Dimensions: 35 x 48 x 98 mm

Weight: 127 g

Tips for Best Use

To use as a stereo AB box, reverse the input and output connections.

Always check the LED indicator to confirm the current mode (Standard red, Flash white).

For stable MIDI operation, ensure your sending device is set to the correct channel and number format.

Safety and Handling

Use only with a proper power supply adapter.

Do not expose to moisture, extreme heat, or strong impact.

Disconnect the power supply when switching operation modes.

Warranty and Support

This product is built to high-quality standards. For warranty service or technical support, please visit the One Control official website or contact your authorized dealer.