

(料号：111080779)




www.xviveaudio.com

PT-05 Chromatic Tuner USER'S MANUAL

Caution

- To avoid short circuit electric shock or malfunction :
Do not disassemble for repair.
- Do not place in high temperature and humid space such as electric heater, direct sunlight, bathroom, wet floor etc.
- Do not place in excessive vibration.
- Do not place in dusty or dirty space.
- Do not operate the tuner with wet hands.
- To avoid breakdown
Do not handle all controls with excessive power.
Do not drop the tuner.
- Cleaning
Do not use thinner or alcohol for cleaning.
Use only dry and clean cloth.

APPEARANCE AND SKETCH

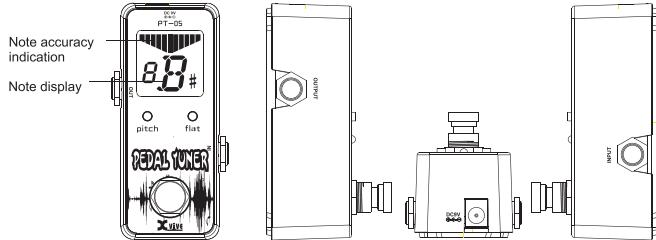

Features & Functions

- FOOT switch
Pressing this switch will turn the tuner on/off.
- INPUT jack
Connect the output cord of the instrument to the input jack of tuner. The input jack also functions as a power switch. When a plug is inserted into the input jack, the power will be turned on. When the plug is pulled out, the power will be turned off. When you are not using the tuner, pull the plug out of the input jack.
- DC 9V in jack
If a DV adapter is used, you will be able to play for extended periods without worrying about battery life. at the same time to charge the battery.
- OUTPUT jack

Connect your Amp or another effect unit to this jack.
When the tuner is off, this will output the signal of the instrument connected to the input jack. NOW is the situation under TRUE BYPASS.

When the tuner is on, no sound will be output from this jack so use this jack if you wish to tune silently.

5) PITCH button

This button lets you change the reference frequency. 7-segment indication of 0~5 means 440~445Hz, and indication of 6~9 means 436~439Hz.

6) FLAT button

This button lets you use flat tunings.

Normal tune



Detuned half a note



Detuned a full note



Detuned one and half a note



Procedure

- Connect output of the instrument to the INPUT jack of tuner, the power will be turned on.
- Press the Foot Switch to turn the tuner on.
- Press the PITCH button to select the reference frequency you want to use.
- Press the FLAT button to select the reference flat you want to use.
- Adjust the instrument until the tuning note you wished to tune is indicated on FND Tuning Note.
- Adjust the instrument slowly until to approach the FND Tuning Guide to the center position.
- When the center of FND Tuning Guide lights up, this point is exact sound of the instrument.

Specifications

Tuning Range : B0-B7
Accuracy : +/- 1 cent
Calibration : 436-445Hz (1 Hz step)
Input : 1/4" Input jack
Output : 1/4" Output jack
Power : 9V DC Adapter
Dimensions : 46 (W) *94 (D) *50 (H) mm
Weight : 300g (including battery)



www.xviveaudio.com

尺寸：100*180MM
材质：80g速写纸
正反面印