

TREBLE:

Controls tone, right for more treble.

GAIN:

Controls Drive or Gain of Overdrive.

BOOST:

Controls output level of pedal. Turn up above unity for a boost effect

MODE SWITCH:

Selects High Headroom Boost Mode (KT88) or Standard Overdrive Mode (KT66)



1962x

EFFECT TYPE:

Boost / Overdrive

Power Requirement:

9V Battery or 9VDC Center
Negative Power Supply Required

Input/Output:

Mono Instrument In,
Mono Instrument Out