

FREQUENCY SELECT:

Use this switch to select the frequency that the BRILLIANCE control will either cut or boost.

DECAY:

Controls Decay Time of Reverb, left for short, right for longer

BRILLIANCE:

Use this control in conjunction with the FREQUENCY SELECT switch in the center. Select your desired frequency to cut or boost, and use this control to cut or boost that frequency by +/- 10db

PREDELAY:

Controls the time before the first reflections of reverb will occur. This is audible as a kind of "slapback" sound. Turn right for longer times, left for shorter.

BLEND:

Controls level of reverb signal in the final mix.

ABBKEY CHAMBER VERB
EFFECT TYPE: Studio Echo Chamber Reverb w/ Brilliance Control
Power Requirement: 9VDC Center Negative, 65mA+ Power Supply Required.
Input/Output: Mono Instrument In, Mono Output



WET/DRY (Internal):

Switches output to a "Full Wet" mode, for use in effects loops. Move switch in to the "down" position to access this mode.