

MODE SELECT
HALL: Long, Bright Ambience
PLATE: Short, Vintage Studio Sound
ROOM: Medium, Warm Ambience

DECAY:
Controls Decay Times of Reverb in All Modes. Turn Right for Longer Reverb

WARMTH:
Turn Right for Warmer Reverb

SLAPBACK:
Adjusts the Time Before the First Reflected Sound. Turn Right for a Slapback Effect.

MIX:
Controls MIX of original signal and wet signal in all modes. Center Position, or "50/50" is an equal blend of WET and DRY, this is the standard operating position. Turn left for less reverb, turn right for more. Full right will result in WET ONLY.



AURORA R E V E R B
EFFECT TYPE: Reverb with 3 Modes
Power Requirement: 9VDC Center Negative, 65mA+ Power Supply Required.
Input/Output: Mono Instrument In, Mono Instrument Output

