

## MODE SELECT SWITCH:

**ECHO 600** - Lo Fi Echo from 30 - 666ms + Small Room Reverb

**SUN MODE** - Double Tracking (0-30ms) and Slapback Echo Up to 180ms with Modulation + Small Room Reverb

**ROOM** - Small Room Reverb with Predelay, and Variable Filtering

### TIME:

**ECHO 600** - Controls Delay Time from 30-666ms

**SUN MODE** - Controls Delay Time from 0-180ms. *Typical Range for Double Tracking is from Zero Position to First Notch*

**ROOM** - Controls Pre Delay Time

### REVERB:

Controls Decay Time of the reverb in all modes.

### REGEN / MOD:

**ECHO 600** - Controls Regen, or the number of repeats for the Delay

**SUN MODE** - Controls Rate and Depth of Modulation, turn right for faster/deeper modulation.

**ROOM** - Controls Reverb tone, applies 10db Cut or Boost at 1.1k.

### BLEND:

Controls BLEND of original signal and wet signal in all modes. Center Position, or "50/50" is an equal blend of WET and DRY, this is the standard operating position. Turn left for less effect, turn right for more. Full right will result in WET ONLY.



### EFFECT TYPE:

Lo Fi Echo / Reverb / ADT

### Power Requirement:

9VDC Center Negative 65mA+  
Power Supply Required

### Input/Output:

Mono Instrument In,  
Mono Instrument Out