

2 STAGE / 4 STAGE SWITCH:


2 Stage for classic 45 degree phase sounds, 4
Stage for 90 degree phase.

RATE:

Controls rate of phaser.

DEPTH:

Controls depth of phaser.


EFFECT TYPE: Vintage 2 or 4 Stage Phaser
Power Requirement: 9V Battery or 9VDC Center Negative Power Supply
Input/Output: Mono Instrument In, Mono Instrument Out

