

TONE:

Controls tone, right for more treble.

DRIVE:

Controls Drive or Gain of Overdrive.

LEVEL:

Controls output level of pedal. Turn up above unity for a boost effect

MODE SWITCH:

Selects Clean Boost Mode (CLEAN) or Lo Gain Overdrive Mode (SANDY)



White Sands
LUXE DRIVE

EFFECT TYPE:

Low Gain Boost / Overdrive

Power Requirement:

9V Battery or 9VDC Center
Negative Power Supply Required

Input/Output:

Mono Instrument In,
Mono Instrument Out