

**MOOER**

# Ensemble Queen

**Bass Chorus Pedal**

## Owner's Manual

### Precautions

**PLEASE READ CAREFULLY BEFORE PROCEEDING**

#### Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V ( $\pm 10\%$ ) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

#### Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

#### Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

#### Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

#### Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Magnetic fields
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Heat sources
- Extreme temperature or humidity
- High humidity or moisture

#### FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

### Main Features

- Digital Chorus pedal originally designed for bass. The rich chorus tones produced by the Ensemble Queen range from soft and subtle to full psychedelic magnificence. All while preserving the power of the original bass signal and a strong low end.

- True Bypass Footswitch
- Works with DC 9V power supply (center minus plug)

### Panel Instructions

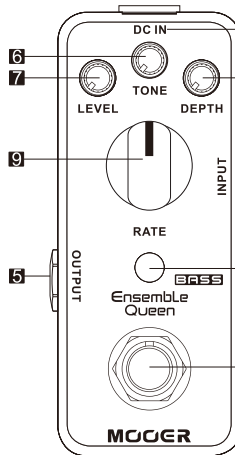

- 1. TRUE BYPASS FOOTSWITCH:**  
Turns the effect on and off.
- 2. ON/OFF LED:**  
Indicates the status of the pedal.
- 3. DC IN Power Jack:**  
Connect 9 volt DC power supply here, we recommend using a Mooyer regulated adapter
- 4. INPUT Jack:**  
1/4" mono audio jack, for connecting your guitar.
- 5. OUTPUT Jack:**  
1/4" mono audio jack, outputs the signal.
- 6. TONE Knob:**  
Adjusts the color of the sound, turning it clockwise will produce a brighter sound.
- 7. LEVEL Knob:**  
Controls the volume of the Chorus effect.

- 8. DEPTH Knob:** Determines how deep the modulations of the chorus effect are.
- 9. RATE Knob:** Adjusts the speed of the effect.

### Specifications

**Input:** 1/4" monaural jack (impedance: 470k Ohms)

**Output:** 1/4" monaural jack (impedance: 100 Ohms)

**Power Requirements:** AC adapter 9V DC (center minus plug), we recommend using the Mooyer Macro Power Supply.

**Current Draw:** 110 mA

**Dimensions:** 93.5mm (D) x 42mm (W) x 52mm (H)

**Weight:** 145g

**Accessories:** Owner's Manual

*\* Disclaimer: Any specification's update won't be amended in this manual.*